


LUX SNL180 IP67 Neon Flex Strip Light Installation Guide

Full spectrum color tunable lighting, including cold and warm white light

Please read the following pages before attempting installation to ensure complete understanding of the LUMISHORE Neon Flex Strip Lights

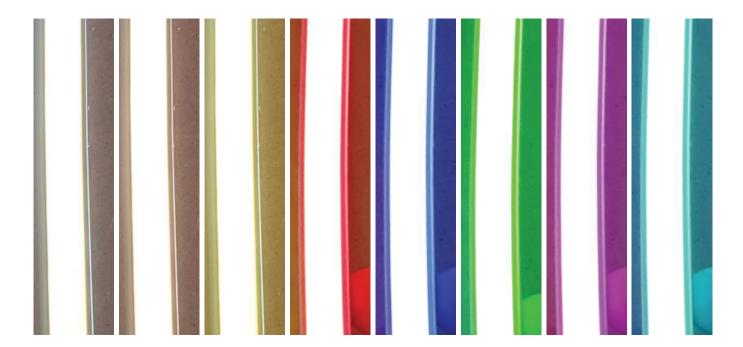

Before you start...

- Always ensure that the vessel's power source and battery are disconnected or isolated prior to installation.
- A qualified professional should carry out both the electrical and mechanical installation.
- The LUX Neon Flex Strip Light Is designed to be used in conjunction with the Lumishore LUX Neon Flex Strip Light Driver modules (see diagram below). Do not connect to any other 3rd party lighting control products or drivers.
- The LUX Neon Flex Strip Light is fully sealed and can be installed inside or outside, it can be installed in wet areas but is not designed to be permanently submerged in water.
- Choose a location the Neon Flex Strip Light is made from UV resistant material but should not be installed in areas of strong direct sunlight.
- The Neon Flex Strip Light has a bend radius of 120mm, do not bend in the vertical axis or twist the Neon Flex Strip Light.
- The Neon Flex Strip Light is delivered in premade lengths that are factory sealed to meet IP67 standards - DO NOT CUT NEON FLEX STRIP LIGHT.

45-0160-Rev 3



Handling & Manipulating:



DO NOT uncoil the Neon Flex by picking up one end - always uncoil it carefully along its length


DO NOT allow the Neon Flex light to drop or twist during install

DO NOT apply excessive pressure to the Neon Flex this could damage the LED strip inside

DO NOT pull, stretch, twist or bend the Neon Flex in the vertical axis

ALWAYS use 2 people to install lengths of over 1m. One person to install, one person to hold and uncoil the Neon Flex

Installation Diagram:

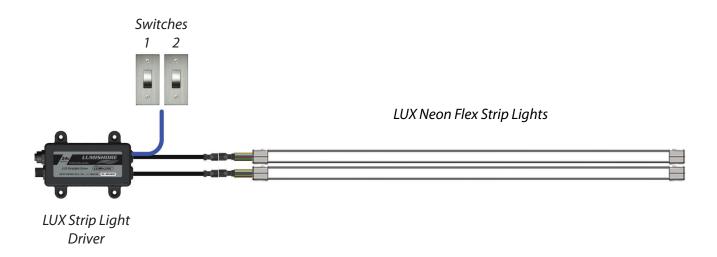

NOTE: The Lumishore LUX Neon Flex Strip Lights requires connection to the Lumishore LUX Strip Light Driver Module. For full electrical installation and wiring diagrams please refer to the LUX Strip Light Driver Installation Manual (45-0143).

Power Rating = 5 watts Per Meter

Voltage Input Range = 23 - 25V*

*ONLY USE WITH LUMISHORE STRIP LIGHT DRIVER MODULES

Lumishore USA 7137 24TH Court East Sarasota, Florida 34243 | (941) 405-3302 | Sales@LumishoreUSA.com



Installation:

The Neon Flex strip is installed using the supplied stainless steel clips. The clips are screwed in place, ensure that suitable screws are used to allow for full engagement of clip onto the strip. Once clips are installed the neon flex strip simply pushes in place where a noticable 'Click' confirms strip is secure. It is recommended for several clips to be used around tight bends to ensure strip conforms well and to avoid lifting.



Warranty:

LUMISHORE Ltd warrants its lighting systems and associated lights and accessories to be free from defects in workmanship for a period of three years, starting from the date of original purchase. Should your lighting system have a problem during this period, please contact your dealer, boat manufacturer or broker as soon as you become aware of the defect.

Misuse, abuse, improper installation, neglect, improper shipping, damage caused by disasters (e.g. fire, flood, storm and lightning), installation by unqualified personnel, unauthorized repair or modification or non-approved installations will void this warranty. For the avoidance of confusion and doubt, non compliance with all installation guidelines, maintenance and operating instructions in this document constitute non conformance with warranty terms.

Full warranty details including exclusions are available at www.Lumishore.com.

The LUX Neon Flex Strip Light is designed to work with Lumishore LUX Strip Light Driver Module ONLY, do not use with other 3rd party drivers, this will invalidate the warranty.